 


DISTRIBUTED BY



OWNER'S MANUAL MODEL SJ 1.5 1.5 TON SCISSOR JACK


WARNING

1. This lifting device is intended for lifting one (1) wheel of a vehicle clear of the ground for emergency tire changing. For other uses, the vehicle shall be supported immediately by appropriate means.
2. DO NOT EXCEED the rated capacity as designated by the height/weight curve. (See below).
3. This is to serve as a lifting device only. DO NOT CRAWL UNDER THE VEHICLE WHEN IT IS SUPPORTED BY THE JACK. Use only on hard level surfaces capable of sustaining the load being lifted.
4. Familiarize yourself thoroughly with this manual before operating to prevent damage to the jack, property, and to avoid personal injury. Consult your vehicle owners manual for specific lift points, and jacking instructions.
5. Read and understand the warnings and instructions before using this device. Failure to do so may result in personal injury and/or property damage.

HEIGHT/WEIGHT CURVE

This device is designed to sustain the following loads at these specified heights. DO NOT EXCEED the rated capacity for each position.

Height (Inches)	Weight (lbs.)
7	693
9-5/16	1320
13	3000

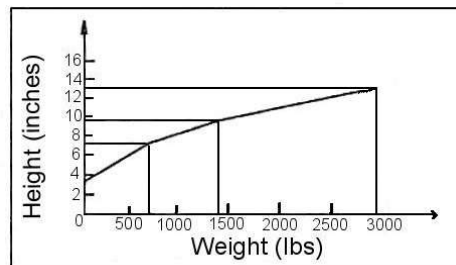

OPERATING INSTRUCTIONS

1. Insert the jack handle into the hole of the handle socket.
2. Make sure the saddle is correctly positioned. To prevent damage to the jack, do not move the jack while the handle is intact in the socket.
3. To raise load, use one hand to hold the front part of the handle, and use the other hand to turn at the rear end of the handle clockwise.
4. To lower load, use one hand to hold the front part of the handle and use the other to turn at the rear end of the handle counterclockwise slowly.

CARE AND MAINTENANCE

1. When jack is not in use, lifting arm should be in full down position.
2. Always keep jack clean and keep the screw and bearing well lubricated.
3. Store the handle with care.