



3 TON HYDRAULIC
POWER UNIT

PRODUCT INFORMATION

MODEL 5-51010-8
"U" Cart Model
Parts Sheet

OPERATING INSTRUCTIONS

June 2007

PROPER USE

1. When lifting on load rest be sure that load is centered and that lift is perpendicular. Lifting on an angle places excessive side strain on ram. Capacity is 6000 lbs.
2. When using flexible hook, position base of jack as close as possible to item being lifted or pulled to avoid unnecessary side load. Capacity is 2500 lbs.
3. Do not push the load off the jack.
4. Always use axle stands when making under vehicle repairs.
5. A 1/4" hi-test chain may be used in slot on top load rest for post and stump pulling, fence stretching etc. This is not supplied with the jack. Capacity is 2500 pounds.

A. TO OPERATE

1. Open release valve and pump handle several times. This will eliminate any airbound condition that may have occurred during shipment.
2. Engage the slotted end of the handle with the head of the release screw.
3. Close release valve by turning to right.
4. Insert handle in handle socket and operate the pump.

B. IF JACK WILL NOT OPERATE

1. Release valve may be open— Turn to right to close.
2. No oil in reservoir—with jack in closed position, place in upright position and add hydraulic jack oil through filler plug until oil is level with filler hole. **DO NOT USE ALCOHOL, GLYCERINE, BRAKE FLUID, THICK OR DIRTY OIL.**
3. Intake and pressure valves may be held open by foreign matter— Use operating instructions A-1.
4. Jack will not operate on side —jack may have been placed on wrong side. The side to which the handle socket is attached must be down.
5. Too much oil in the reservoir—Too much oil is liable to cause a vacuum bound jack. The oil should be brought to the level of the fill plug.

C. IF JACK WILL RAISE TO LOAD BUT WILL NOT LIFT IT

1. Release screw may be closed tight enough to raise ram, but not closed tight enough to lift load.
2. Ram may be at extended height—Shim jack up.
3. Ram cup may have become injured or porous, allowing oil to pass it.
4. Air under ram— When there is a quantity of air under the ram, the ram will raise until it hits the load, then it will stay there until there has been sufficient number of pump strokes to compress this air to the proper pressure to lift the load. If this happens, turn jack upside down with ram extended, open release screw and close jack completely. This will cause air to return to oil reservoir.

5. Sticky valves— Empty all oil from reservoir and refill with gasoline or naphtha. Flush as recommended in operating instruction A-1. Then fill with new hydraulic jack oil.

D. IF JACK WILL NOT HOLD LOAD

1. Release valve may not be tight enough.
2. Ram cup may have become injured, allowing oil to pass it.
3. Ball valves may not be seated properly—Flush off as prescribed in operating instructions A-1. The construction of this jack makes the ball valves readily accessible for cleaning. Remove release screw. Remove valves by tipping the jack forward and catching these parts in the hand or a container, place jack on back side with label up to avoid loss of oil. After washing ball valves in kerosene, assemble in reverse order, replace ball if flat spots or pitted surfaces are found.

MAINTENANCE

1. Refill only with recommended jack oil. Never use a substitute.
2. Use every precaution to prevent entrance of dirt when refilling jack.
3. Store in upright position in a dry place.
4. When stored, the ram should be lowered completely. The pump piston should be in the lowest position and the release valve should be closed.
5. Repair kit 5-532

LUBRICATION

1. Oil all moving parts periodically.
2. Grease should be used on all exposed parts if jacks are constantly used under wet conditions.



WARNING

- A. This device is a lifting device only. The load shall be supported immediately by other appropriate means.
- B. Do not overload. Overloading can cause damage to or failure of the jack.
- C. Lift only on areas of the vehicle as specified by the vehicle manufacturer.
- D. This jack designed use on only hard level surfaces capable of sustaining the load. Use on other than hard, level surfaces can result in jack stability and possible loss of load
- E. Failure to heed these warning may result loss of load, damage to the jack, and/or failure resulting in personal injury or property damage

WARRANTY INFORMATION

All U.S. Jack manufactured products are warranted for a period of one year against defects in material and workmanship. This warranty is limited to original consumer purchaser. Warranty does not cover damage due to accident, neglect or misuse, or products that have been altered or modified, or to which attachments not recommended by the manufacturer have been added. Proof of purchase is required and all warranty claims should be submitted directly to U.S. Jack Company

MODEL 5-51010-8

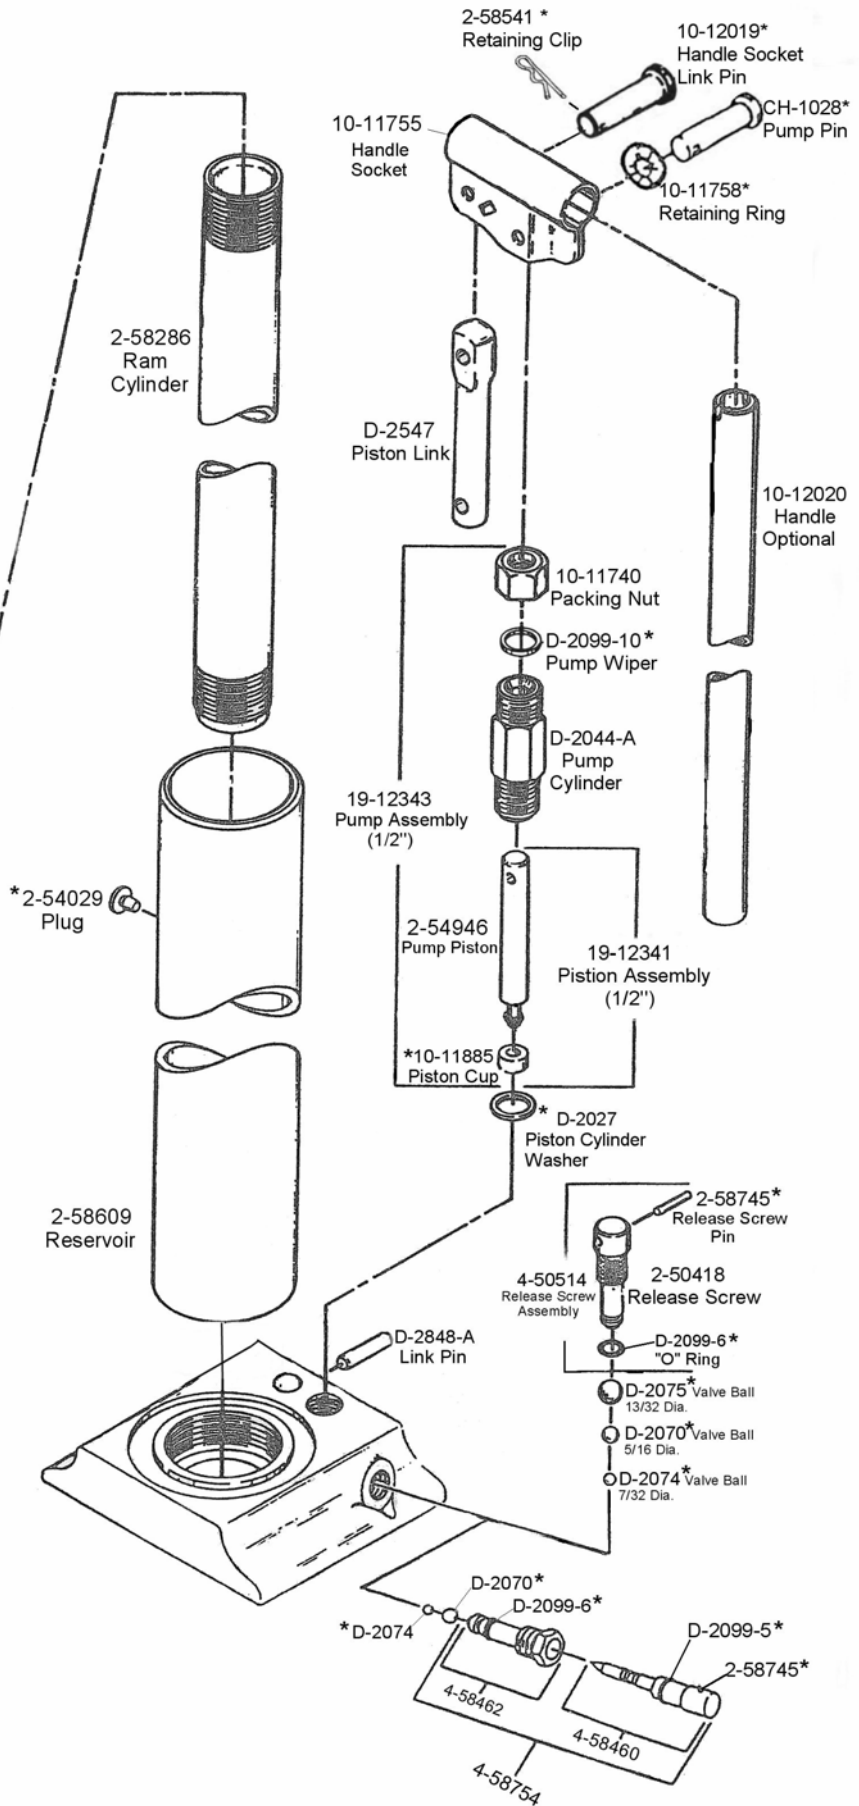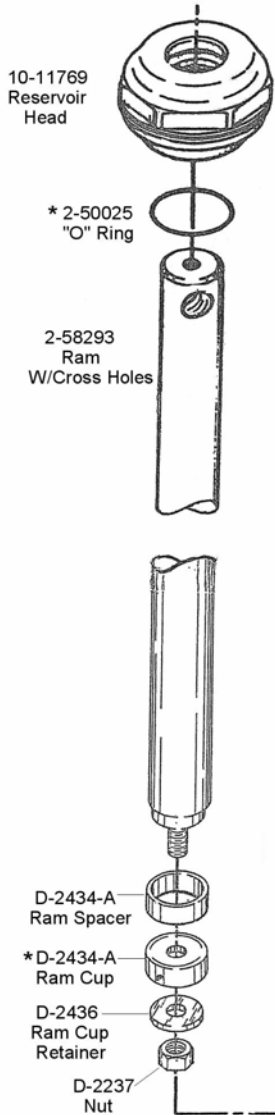

* Denotes Items in
Repair Kit 5-532